
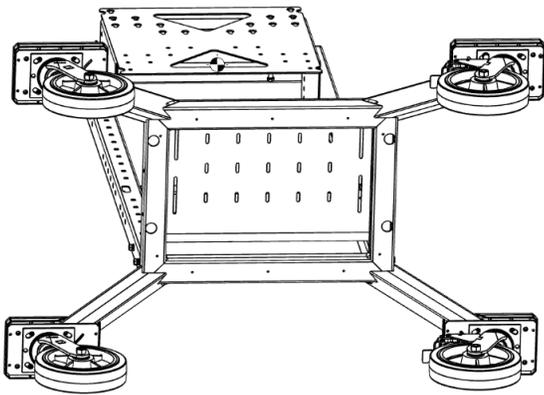



# Explorer<sup>™</sup> TV Accessory – Directional Locks

## Assembly Instructions


Model: ETCPRMDL

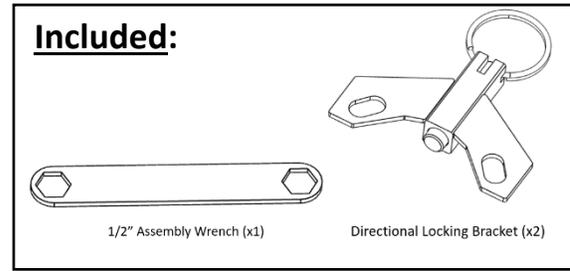


**1. If purchased separately, remove TV from your Explorer TV Cart and lay it on its back.**

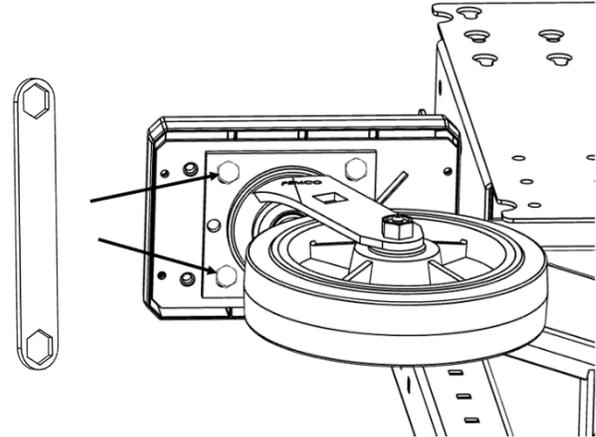


**2. On the swivel caster side, use the wrench to remove the screws and washers above.**

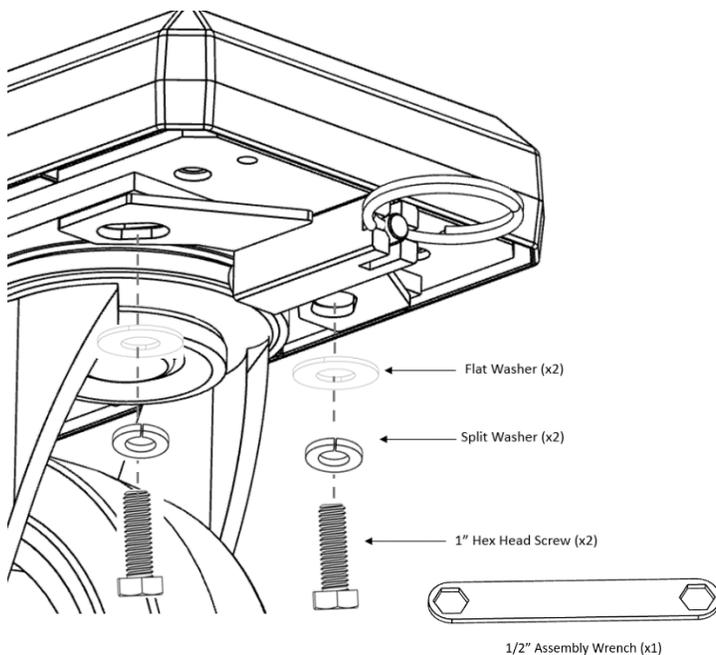

**3. Add the directional locking brackets, attach with removed washers and screws, then tighten with wrench.**

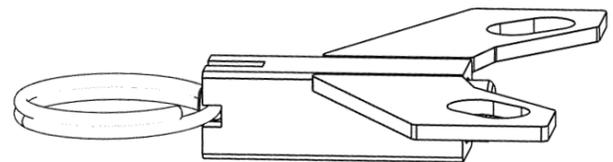

Swivel

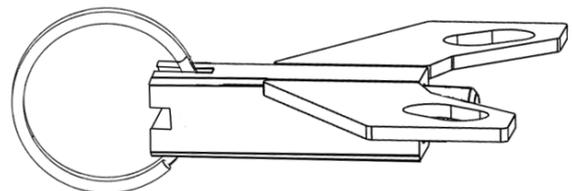

Direction Locked

**4. To lock the caster directionally, pull the tab out of the shallow slot, turn 90 degrees, and slide into the deep slot.**